



## STEP BY STEP

THIS IS HOW YOU PROCEED WHEN APPLYING TOUCH-UP PAINT

### 1. PREPARATION

First clean the damaged area and remove any dirt or oil. If the bare metal is already visible, be sure to use primer!



### 2. SHAKE PAINT STICK WELL

Shake the touch-up pen for 2-3 minutes until the mixing ball audibly hits. If you need to use a clear coat, just 1 minute is enough.





### 3. APPLY COLOR PAINT


Wipe the brush well to ensure an even application of paint. Dab the polish thinly.

Deep scratches require 2-3 coats.



### 4. APPLY CLEAR COAT

Metallic paintwork should definitely be covered with clear varnish. To do this, let the paint dry thoroughly for about 20 minutes and then apply the clear coat.

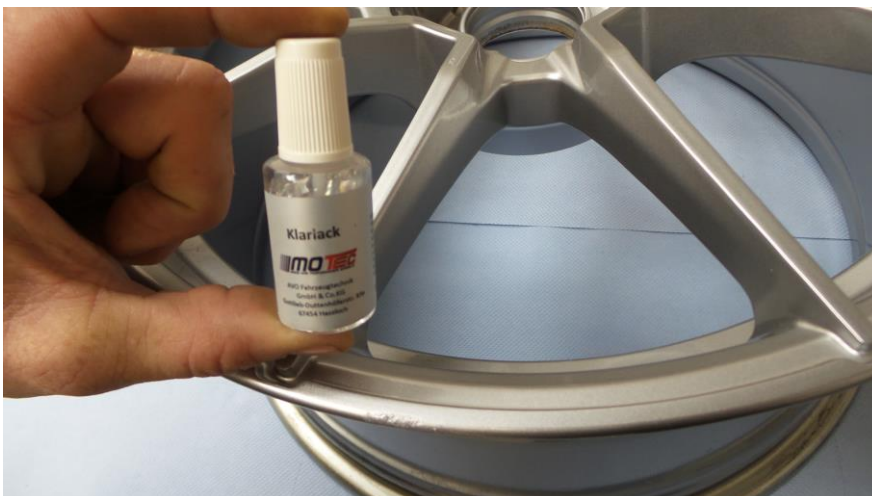

**Attention!!! Only use clear varnish with shiny varnishes!**



## 5. REGRINDING

After 24 hours, roughen the repaired area with fine sandpaper (2500 or 3000) or polishing compound to sand the clear coat smooth.



## 6. REPOLISH

Finally, polish the processed area to give it a shiny finish. Use polishing sponge with polish for this.

